

F-01


## HEADLIGHT &amp; FRONT FAIRING



PartNo.	Артикул	Описание	
F01-01	QJZ33100	Headlight Assy	pc
F01-02	XGA33183	Circlip	pc
F01-03	QJZ33150	Socket set, front position light	pc
F01-04	Q94012V3	Bulb, HS112V35/35W	pc
F01-05	QJZ30150	Socket set, front position light, LH	pc
F01-06	QJZ43131	Case, meter	pc
F01-07	QJZ43117	Ornament, headlight housing, RH	pc
F01-08	QJZ43361	Guard, RH	pc
F01-09	QJZ43111	Housing set, headlight	pc
F01-10	QJZ43461	Guard, LH	pc
F01-11	QJZ43118	Ornament, headlight housing, LH	pc

F-02

## METER

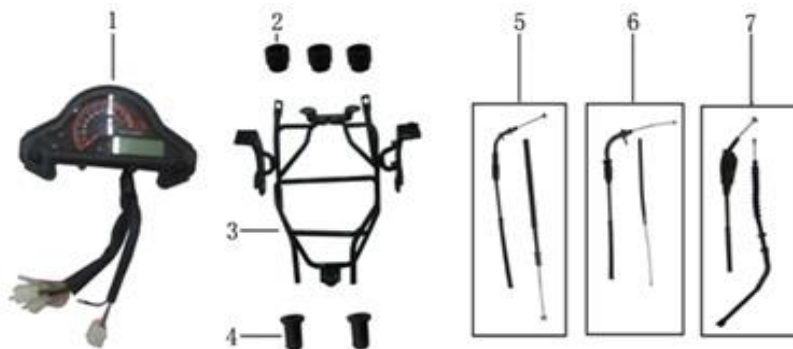


PartNo.	Артикул	Описание	
F02-01	QJZ37000	Meter Assy	pc
F02-02	QJZ37951	Meter Gasket	pc
F02-03	QJZ33910	Stay comp., headlight	pc
F02-04	UIA33912	Boot, headlight stay	pc
F02-05	JJM46350	Cable, choke	pc
F02-06	QJZ46300	Cable comp., throttle	pc
F02-07	QJZ46200	Cable, clutch	pc

F-03 GRIP & SWITCH



PartNo.	Артикул	Описание	
F03-01	QJZ47600	Lever comp., clutch	pc
F03-02	QJZ47611	Lever, clutch	pc
F03-03	JLC57200	Mirror, rearview, LH	pc
F03-04	JLC57100	Mirror, rearview, RH	pc
F03-05	QJZ47370	Weight, steering bar	pc
F03-06	QJZ47411	Grip, LH	pc
F03-07	QJZ35200	Switch, handlebar, LH	pc
F03-08	QJZ35100	Switch, handlebar, RH	pc
F03-09	QJZ47300	Grip comp., throttle	pc

F-04 STEERING STEM

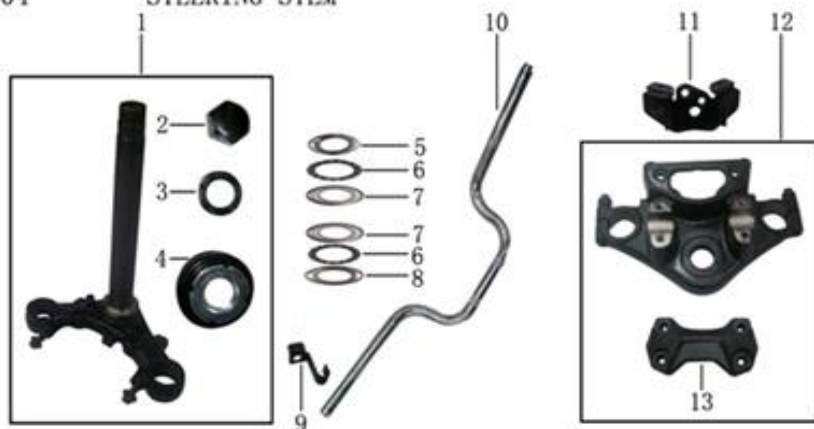

PartNo.	Артикул	Описание	
F04-01	QJZ51210	Stem set, steering	pc
F04-02	UMX93221	Nut, cap, M24×1-17	pc
F04-03	UMX93541	Washer, plain, 24.5×Φ37-1	pc
F04-04	QJX51940	Dust cover, steering stem	pc
F04-05	QJX51951	Top Bearing Top Ball Race	pc
F04-06	QJX51950	Steering Stem Bearing Set	pc
F04-07	QJX51952	Top Bearing Bottom Ball Race	pc
F04-08	QJZ51954	Bottom Bearing Bottom Ball Race	pc
F04-09	QJZ37982	Lug, speed sensor	pc
F04-10	QJZ47110	Pipe set, steering bar	pc
F04-11	QJZ35940	Lid comp., ignition switch lock	pc
F04-12	QJZ51311	Bridge, upper	pc
F04-13	QJZ47151	Clamp, steering bar	pc

F-05

FRONT FENDER



PartNo.	Артикул	Описание	
F05-01	QJZ53111	Front Fender	pc
F05-02	QJZ53120	Lining set, front fender	pc

F-06

FRONT HYDRAULIC BRAKE ASSY



PartNo.	Артикул	Описание	
F06-01	QJZ56000	Front Hydraulic Brake Assy	pc
F06-02	XXXXXXXX	Front Brake Switch	pc
F06-03	XXXXXXXX	Front Brake Lever	pc
F06-04	XXXXXXXX	Front Brake Shoe Set	SET

F-07

SHOCK ABSORBER



PartNo.	Артикул	Описание	
F07-01	QJZ52400	Shock absorber, front, RH	pc
F07-02	QJZ52500	Shock absorber, front, LH	pc
F07-03	XXXXXXXX	Dust Cover	pc
F07-04	XXXXXXXX	Oil Seal,Front Shock Absorber	pc

F07-05	QJZ37981	Stay, speed sensor	pc
F07-06	NIX33810	Reflector, front	pc
F07-07	QJZ62100	Shock absorber Assy, rear	pc

### F-08 FUEL TANK



PartNo.	Артикул	Описание	
F08-01	QJZ16956	Rubber, front fuel tank	pc
F08-02	QJZ16610	Tank weldment, fuel	pc
F08-03	QJZ37810	Sensor, fuel	pc
F08-04	JLC16810	Cock comp., fuel	pc
F08-05	QJZ16818	Handle, fuel cock	pc
F08-06	QJZ16995	Cushion, rear fuel tank	pc

### F-09 油箱护板 FUEL TANK GUARD



PartNo.	Артикул	Описание	
F09-01	QJZ49111	Ornament set, fuel tank, RH	pc
F09-02	QJZ49112	Ornament, fuel tank inner, RH	pc
F09-03	QJZ19461	Hood, radiator	pc
F09-04	QJZ49122	Ornament, fuel tank inner, LH	pc
F09-05	QJZ49121	Ornament set, fuel tank, LH	pc

F-10 FRONT WHEEL




PartNo.	Артикул	Описание	
F10-01	QJZ54700	Tyre, front	pc
F10-02	QJZ54100	Hub comp., front wheel	pc
F10-03	QJZ56311	Disc, front brake	pc
F10-04	ULA54911	Axle, front	pc
F10-05	QJZ54912	Bush, front wheel, RH	pc
F10-06	JJM37870	Sensor, speed	pc

F-11 REAR WHEEL



PartNo.	Артикул	Описание	
F11-01	QJZ64700	Tyre, rear	pc
F11-02	QJZ64100	Hub, rear wheel	pc
F11-03	QJZ64253	Buffer, rear wheel	SET
F11-04	QJZ66311	Disc, rear brake	pc
F11-05	ZJX54911	Axle, rear	pc
F11-06	QJZ64913	Rear Wheel Bush,LH	pc
F11-07	QJZ64912	Rear Wheel Bush, RH	pc
F11-08	QJZ68521	Sprocket	pc
F11-09	QJZ68500	Hub Assy, sprocket	pc

F-12 REAE FORK

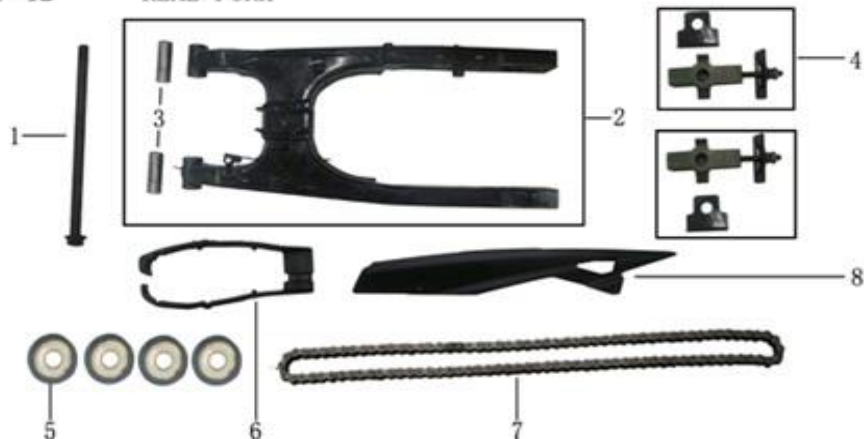

PartNo.	Артикул	Описание	
F12-01	QJZ61951	Shaft, rear fork	pc
F12-02	QJZ61101	Fork comp., rear	pc
F12-03	QJZ61911	Bush, rear fork, inner	pc
F12-04	QJZ61400	Adjuster set, chain	pc
F12-05	ZJA61240	Dust cover, rear fork shaft	pc
F12-06	QJZ61491	Guide, chain	pc
F12-07	Q98008MC12 6	Chain, 08MC×126	pc
F12-08	QJZ61311	Chaincase	pc


F-13 SEAT & AIR CLEANER



PartNo.	Артикул	Описание	
F13-01	QJZ44100	Seat Assy	pc
F13-02	QJZ17100	Cleaner Assy, air	pc
F13-03	QJZ17120	Element, air cleaner	pc

F-14

EXHAUST MUFFLER

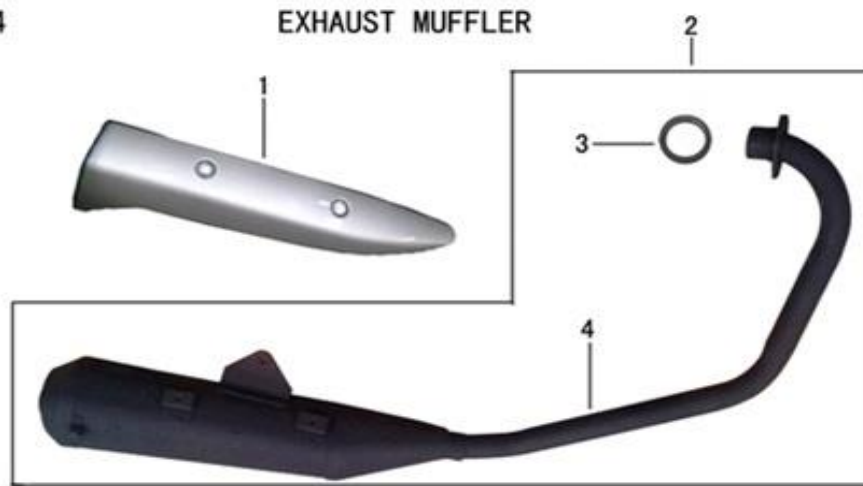

PartNo.	Артикул	Описание	
F14-01	QJZ18391	Ornament, muffler	pc
F14-02	QJZ18000	Muffler Assy, exhaust	pc
F14-03	QJX18920	Gasket set, muffler	pc
F14-04	QJZ18100	Muffler comp., exhaust	pc

F-15

CENTER STAND



PartNo.	Артикул	Описание	
F15-01	QJZ42100	Stand, center	pc
F15-02	QJZ42911	Shaft, center stand	pc
F15-03	ZJA42913	Spring, center stand	pc
F15-04	ZJX42922	Spring, side stand	pc
F15-05	NIX93121	Bolt, pivot, M10×1.25×35-Φ12×17	pc
F15-06	QJZ42200	Stand, side	pc

F-16

REAR FENDER



PartNo.	Артикул	Описание	
---------	---------	----------	--




F16-01	QJZ63411	Резинка	pc
F16-02	QJZ43612	Flap, rear mud	pc
F16-03	QJZ63111	Cover, tool box	pc
F16-04	QJZ63155	Fender, rear	pc
F16-05	QJZ33760	Ornament, rear	pc
F16-06	QJZ63920	Light comp., license plate	pc
F16-07	ZJA33820	Bracket set, front body	pc
F16-08	YHA96100	Reflector, rear	SET

### F-17 FOOTRESTS



PartNo.	Артикул	Описание	
F17-01	QJZ42300	Footrest Assy, rider, RH	pc
F17-02	QJZ42400	Footrest Assy, rider, LH	pc
F17-03	QJZ24700	Lever, gearshift	pc
F17-04	QJZ24713	Pivot, gearshift pedal	pc
F17-05	QJZ42310	Footrest comp., rider, RH	pc
F17-06	QJZ42511	Treadle, pillion, RH	pc
F17-07	QJZ42410	Footrest comp., rider, LH	pc
F17-08	QJZ42611	Treadle, pillion, LH	pc

### F-18 RADIATOR

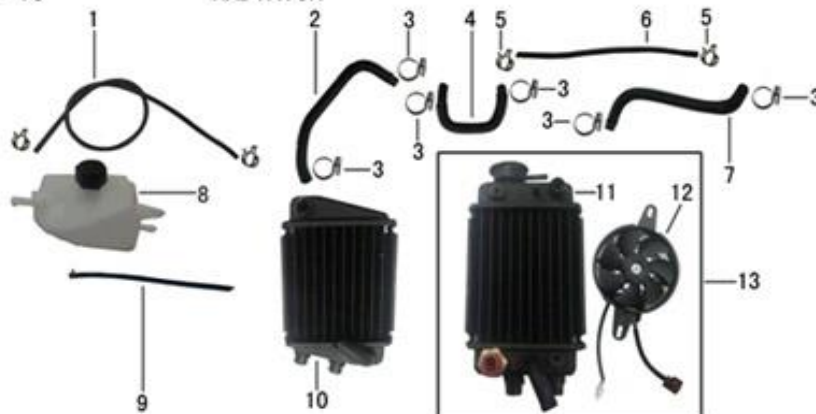

PartNo.	Артикул	Описание	
F18-01	QJZ19131	Pipe, storage reservoir outlet	pc
F18-02	QJZ19495	Hose, radiator inlet	pc
F18-03	Q676B25	Clamp, 25	pc
F18-04	QJZ20176	Pipe., connecting	pc
F18-05	Q671B100F30	Clamp, 9	pc
F18-06	QJZ19362	Pipe, small	pc
F18-07	QJZ19431	Hose, radiator outlet	pc
F18-08	QJZ19100	Reservoir, storage	pc



F18-09	QJZ19132	Pipe II, storage reservoir outlet	pc
F18-10	QJZ19410	Radiator set	pc
F18-11	XXXXXXXX	Radiator	pc
F18-12	TIX19800	Fan Assy	pc
F18-13	QJZ19420	Radiator set II.	pc

### F-19 ELECTRICAL ELEMENTS



PartNo.	Артикул	Описание	
F19-01	QJZ32100	Cable, main	pc
F19-02	QJZ38100	Horn	pc
F19-03	SJA31600	Rectifier	pc
F19-04	JJA38210	Relay, flashing	pc
F19-05	BJX34400	Controller, ignition	pc
F19-06	GIA34600	Relay, starting	pc
F19-07	BJX34500	Coil, ignition	pc
F19-08	ZJX31500	Battery, 12N9-BS	pc

### F-20 WINKER & TAILLIGHT



PartNo.	Артикул	Описание	
F20-01	Q940RY12	Bulb, RY12V10W	pc
F20-02	QJZ33550	Winker, front, LH	pc
F20-03	QJZ33510	Winker, front, RH	pc
F20-04	QJZ33650	Winker, rear, LH	pc
F20-05	QJZ33610	Winker, rear, RH	pc
F20-06	QJZ33700	Taillight Assy	pc

## F-21

## REAR PANEL &amp; SIDE COVER




PartNo.	Артикул	Описание	
F21-01	QJZ43711	Panel, rear	pc
F21-02	QJZ43722	Ornament, rear panel, LH	pc
F21-03	QJZ43712	Ornament, rear panel, RH	pc
F21-04	QJZ43754	Plate, rear panel connecting, LH	pc
F21-05	QJZ43753	Plate, rear panel connecting, RH	pc
F21-06	QJZ43411	Cover set, side, LH	pc
F21-07	QJZ43311	Cover set, side, RH	pc
F21-08	QJZ43414	Ornament, side cover, LH	pc
F21-09	QJZ43314	Ornament, side cover, RH	pc

## F-22

## REAR BRAKE



PartNo.	Артикул	Описание	
F22-01	QJZ66000	Rear Hydraulic Disc Brake	pc
F22-02	QJZ66940	Bracket set, rear brake reservoir	pc
F22-03	QJZ66930	Bracket set, rear brake master cylinder	pc
F22-04	QJZ65940	Spring set, rear brake pedal	pc
F22-05	QJZ65410	Pedal, rear brake	pc
F22-06	XXXXXXXX	Rear Brake Shoe Set	SET

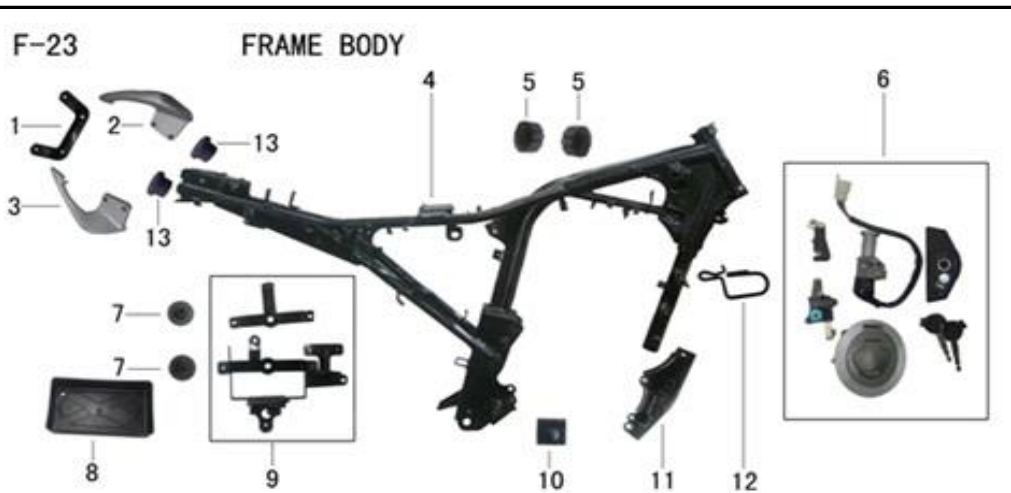

PartNo.	Артикул	Описание	
F23-01	QJZ43730	Bracket set, rear panel	pc
F23-02	QJZ45531	Handrail, LH	pc
F23-03	QJZ45511	Handrail, RH	pc
F23-04	QJZ41100	Body weldment, frame	pc
F23-05	QJZ16951	Cushion, fuel tank front	pc
F23-06	QJZ48000	Lock Assy	SET
F23-07	QJX31855	Cushion, battery	pc
F23-08	QJZ31811	Case, battery	pc
F23-09	QJZ31810	Stay set, battery	pc
F23-10	QJZ42191	Rubber, center stand	pc
F23-11	QJZ42711	Plate, engine front connecting	pc
F23-12	QJZ32952	Clamp, main cable	pc
F23-13	QJZ41995	Frame Hole Plug	pc